
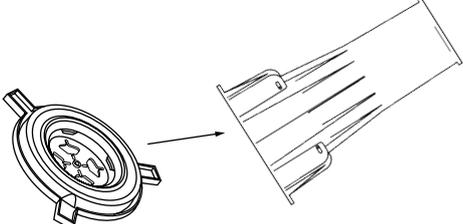
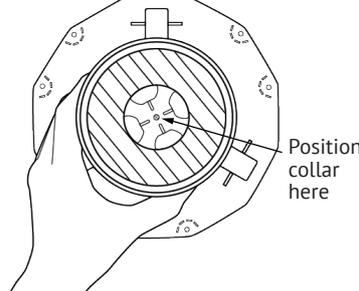
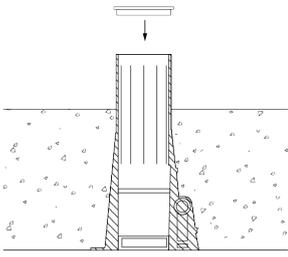
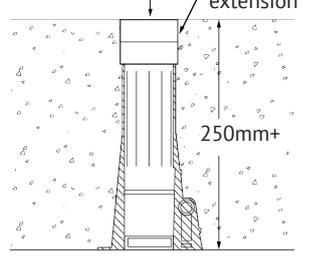
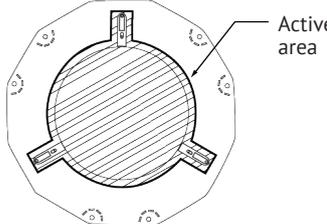


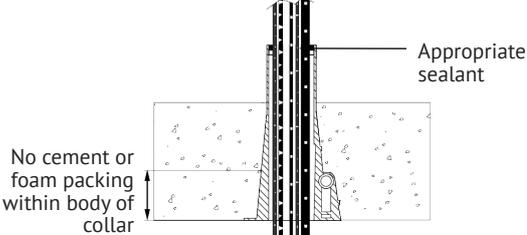

⚠ IMPORTANT The intumescent sleeve must not be altered or tampered with.

1	<p>Verify that the intended use of the collar is supported by a compliant report. See snapcollars.com.au for compliant solutions.</p> <p>Inspect the collar to make sure it has not been damaged in transit and all components are present.</p>	
2	<p>Insert the locator plate (8) into the base of the collar. Look down through the top of the collar and use the alignment window (8b) of the locator plate (8) to position the collar on the formwork.</p> <p>Secure the collar to the formwork using the preferred fixing points ensuring the collar base flange (7) is flat on the formwork.</p>	
3	<p>⚠ IMPORTANT ⚠ Do not cut down the collar casing</p> <p>Fit the cap (1) to the top of the collar or extension. The collar is now ready for the concrete to be poured.</p> <p>Note: If the slab thickness exceeds 250mm, collar extensions will be required.</p>	<div style="display: flex; justify-content: space-around;"> <div data-bbox="869 1008 1157 1332"> <p>Without extension</p>  </div> <div data-bbox="1173 1008 1484 1332"> <p>With extension</p>  </div> </div>
4	<p>After the slab has cured, remove the formwork and the locator plate.</p> <p>Inspect the collar to ensure that no residual concrete remains in the spring pockets, (5) around the fusible links and springs, and that no foreign material is within the active area of the collar.</p>	
5	<p>Install the required services through the collar, taking care not to damage any internal components.</p> <p>If required, seal around the services at the top of the collar in accordance with the appropriate report evidence.</p>	
6	<p>Ensure that the active area of the collar is completely exposed to the compartment below.</p>	